

Smart Bike Computer User Manual

---for Cyrusher XF 700 electric bike

-Functions:



-How to adjust and reset:



1. Long press to turn on/off the power



2. Short press to switch different functions



3. **Short press** to rise or lower PAS levels;
Short press to switch speed levels



short press to rise, PAS+1



short press to lower, PAS-1

4. **Long press** both button to switch speed unit (**mph, kmh**)



5. Long press to turn on/off front light



6. **Long press**



To enter cruising mode (3.5mph), when it's resting and motionless. cruising distance approx 5miles; Long press the button to quit

7. Resetting bike parameters

1) Long press  +  to re-set parameters, P01-P16

2) short press  or  to reset

3) long press  to save

4) short press  to switch to next parameter

5) long press  +  to quit the resetting; or it will automatically quit after 10 seconds

Reference 1: Parameters and setting

	Parameters and setting
P01	Light brightness level. 1: the darkest. 2: mid; 3:the brightest
P02	Mileage unit. 0:km;1:mile
P03	voltage degree 36v and 48v. 36v is correct voltage for XF700
P04	Sleep mode(power saving). 0: no sleep time. 1-60min are the sleep time
P05	PAS levels. PAS0-3, and PAS0-5. XF700 default setting is PAS0-5.
P06	Wheel diameter; unit: inch; accuracy:0.1
P07	Magnets quantity to measure speed. Range:1-100
P08	Speed range.: 0-50km/h; if you set it 50km/h,it means unlimited speed. XF300 default speed setting is 30km/h We recommend to keep 30km/h for safety issue
P09	0: Zero speed start; 1: non zero start
P10	Driving mode 0: pedal assistance drive, throttle is useless here 1: throttle/power drive, pedal assistance useless 2:both power assistance and throttle functional.
P11	Pedal assistance sensibility setting: 1-24
P12	Pedal assistance strength setting: 0-5
P13	Power assistance magnet quantity setting:5, 8, 12
P14	Controller over current protection setting: 1-20A XF700 default setting is 12A
P15	NONE. Pls ignore this.
P16	Odometer resetting. Press it 5 seconds 

Reference 2, error code

Error code	Status
000	Bike in normal state.
001	Reserve
002	Brake
003	Pls ignore 003
004	Bike is under low speed cruising, speed 3.5m/h
005	Current cruising
006	Battery low voltage
007	Motor failure
008	Throttle failure
009	Controller failure
010	Communication receiving failure
011	Communication sending failure
012	BMS communication failure
013	Headlight fault