
FR100 Installation Instruction



1.Remove the Packing







2. Pre-assembling tools




Remove the packing

2.Install Handlebar



a. Take off the front wheel

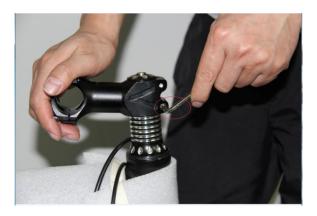

b. Screw off stem(the side screw)



c. Screw off the stem(the above screw)



d. Turn around the stem and take off the cap



e. Lock the stem cap with handlebar inside



Handlebar Installation completes

3. Install front wheel



a. Take the front fork protector



b. Remove the front wheel cap protector




c. Remove the front wheel disc protector





d. Aim the brake disc to the brake device

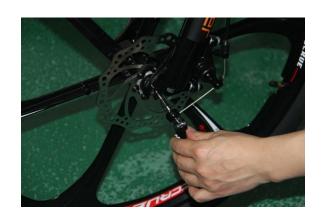

e. Lock the front wheel with quick release



f. The front wheel install completes

4. Install the seat post







a. Adjust the height


b. Fasten the clamp



Do REMEMBER to remove the rear derailleur protector before your riding

5. Install the pedal







b. Aim the pedal to the hole



c. Use spanner tightenthe pedal(For your safety,the pedalsmust be tightenfirmly)

Congratulations, Ready to ride!

